



Dimension



Connect to Sensor

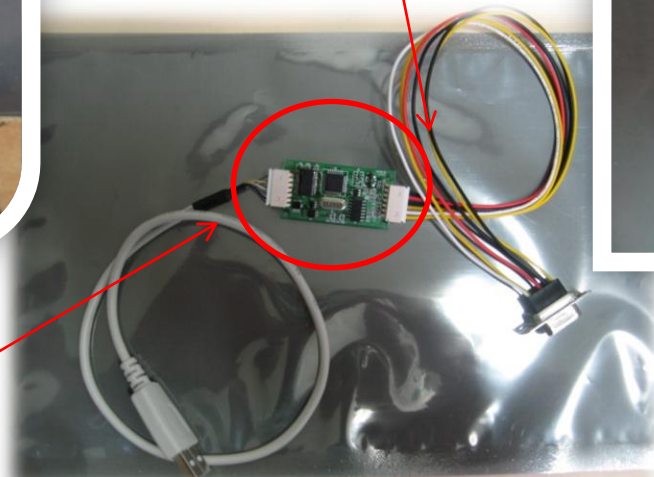


ICOM2 (USB)

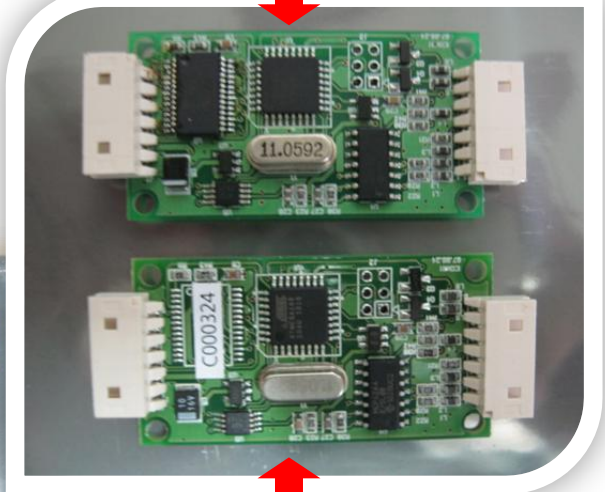


ICOM1 (RS232)

Connect to PC USB or RS232

Disposable probe sensor

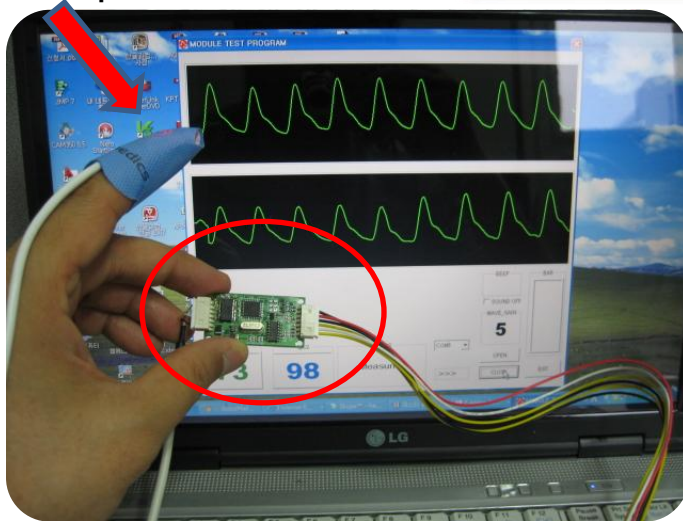

Reusable probe sensor

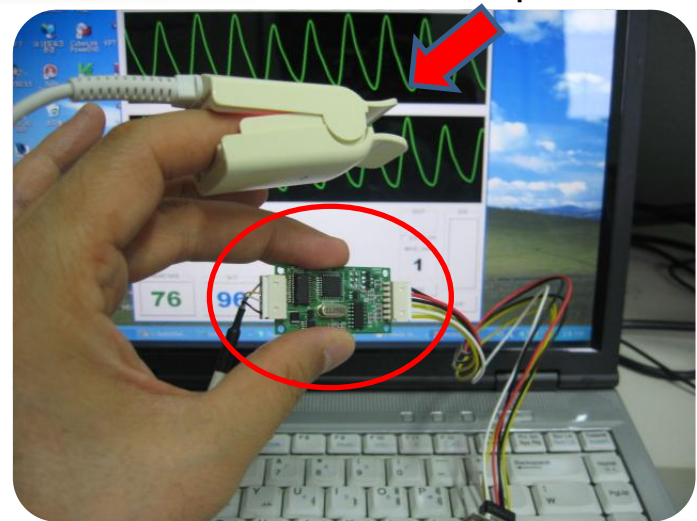

PC SW shows PPG signal through SpO2 module